

Warner Shelter Systems Limited

Tents and Fabric-Clad Structures

9811 - 44th Street, SE, Calgary, Alberta, Canada T2C 2P7 Phone: (403) 279-7662 or (800) 661-6155; Fax: (403) 236-2633 Website: www.wssl.com • E-mail: warner@wssl.com





IMPORTANT:

PLEASE READ INSTRUCTIONS PRIOR TO ERECTING THE TENT.

PROPER INSTALLATION WILL ENSURE MAXIMUM USAGE AND STABILITY OF THIS STRUCTURE.

IF FURTHER INFORMATION OR CLARIFICATION OF ANY PART OF THE ENCLOSED INSTRUCTION IS REQUIRED, PLEASE CONTACT:

WARNER SHELTER SYSTEMS LIMITED 1-800-661-6155 OR E-MAIL: warner@wssl.com

CAUTION -

- Each installation site must be evaluated and the proper securing method determined by the installer. Some soils require staking or securing different from that which was provided with the tent
- 2. Good judgment and common sense must be used along with installation guidelines. It is the responsibility of the tent installer/maintainer to anticipate the severity of the weather along with the proper time and method of setup and take down. Evacuation of the tent is recommended before weather becomes extreme. A successful event is a safe event.
- Proper safety equipment, such as hard hats, steel toe shoes, and safety glasses, should be used to ensure a safe setup and take down.

1.) TENT LOCATION. 2. 2.) PARTS LIST AND PARTS NUMBER 3. 3.) FRAME ASSEMBLY 4-3 Post & Centrepole Assembly Step 2. PAGE 4 Upper Frame Assembly Step 3. PAGE 4 Cross Cable Installation Step 4 & 5. PAGE 4 Cable: Slide Wall Installation (optional). Step 6. PAGE 5 4.) CANOPY INSTALLATION 4 Protecting Canopy Step 7. PAGE 5 Unfolding Canopy Step 8. PAGE 5 Securing Canopy to Frame Step 8A/8B PAGE 5 5.) ERECTING THE TENT 6-7 Installing Posts Step 9 PAGE 6 Installing Centrepole Step 10 & 11 PAGE 6 Securing the Structure Step 13 & 14 PAGE 7 6.) WALL INSTALLATION 9-10 8.) SUMMARY 10 9.) CARE FOR YOUR VINYL TOPS 11 10.) MAINTENANCE 12	- Tak	ole of Contents —————————		PAGES
3.) FRAME ASSEMBLY 4-1 Post & Centrepole Assembly Step 2 PAGE 4 Upper Frame Assembly Step 3 PAGE 4 Cross Cable Installation Step 4 & 5 PAGE 4 Cable: Slide Wall Installation (optional) Step 6 PAGE 5 4.) CANOPY INSTALLATION Protecting Canopy Step 7 PAGE 5 Unfolding Canopy Step 8 PAGE 5 Securing Canopy to Frame Step 8A/8B PAGE 5 5.) ERECTING THE TENT 6-7 Installing Posts Step 9 PAGE 6 Installing Centrepole Step 10 & 11 PAGE 6 Securing the Structure Step 13 & 14 PAGE 7 6.) WALL INSTALLATION 9-10 8.) SUMMARY 10 9.) CARE FOR YOUR VINYL TOPS 11	1.)	TENT LOCATION		2
Post & Centrepole Assembly Step 2	2.)	PARTS LIST AND PARTS NUMBER		3
4.) CANOPY INSTALLATION Protecting Canopy Step 7 PAGE 5 Unfolding Canopy Step 8 PAGE 5 Securing Canopy to Frame Step 8A/8B PAGE 5 Securing Canopy to Frame Step 8A/8B PAGE 5 5.) ERECTING THE TENT 6-7 Installing Posts Step 9 PAGE 6 Installing Centrepole Step 10 & 11 PAGE 6 Securing the Structure Step 13 & 14 PAGE 7 6.) WALL INSTALLATION 9-10 8.) SUMMARY 9-10 9.) CARE FOR YOUR VINYL TOPS 12	3.)	Post & Centrepole Assembly Step 2 PAGE Upper Frame Assembly Step 3 PAGE Cross Cable Installation Step 4 & 5 PAGE	4 4	4-5
5.) ERECTING THE TENT 6-7 Installing Posts Step 9 PAGE 6 Installing Centrepole Step 10 & 11 PAGE 6 Securing the Structure Step 13 & 14 PAGE 7 6.) WALL INSTALLATION 9-10 7.) JOINER INSTALLATION 9-10 8.) SUMMARY 10 9.) CARE FOR YOUR VINYL TOPS 10	4.)	CANOPY INSTALLATION	5 5 5	5
7.) JOINER INSTALLATION	5.)	ERECTING THE TENT Installing Posts	6 6	6-7
8.) SUMMARY	6.)	WALL INSTALLATION		8
9.) CARE FOR YOUR VINYL TOPS	7.)	JOINER INSTALLATION		9-10
, <u>-</u>	8.)	SUMMARY		10
10.) MAINTENANCE	9.)	CARE FOR YOUR VINYL TOPS		11
	10.)	MAINTENANCE		11

- Tent Location -

VERY IMPORTANT!

Ascertain tops, guys, and other tent parts are in good operating condition. Any components showing damage should be replaced immediately.

Before unloading, review the proposed location of the tent. In doing so, take into account the following:

Hazards Locate, mark, and avoid any overhead or underground electrical, phone, gas, sprinkler or other lines. Take note and always be aware of any and all hazards. DO NOT BEGIN ANY ASSEMBLY UNTIL THE HAZARDS HAVE BEEN MARKED AND

CAN BE SAFELY AVOIDED.

Access Plan the best route for bringing the tent and equipment for the setup onto and off

the site.

Drainage Attempt to influence the location of the tent so that rain or melting snow can drain

away.

Obstacles A clean, level and unobstructed site will provide an easy assembly of the tents.


Weather Do not attempt to setup the tent during thunderstorms, high winds or other extreme


conditions.

Safety Before the set up, instruct the crew on safety procedures. All local safety and fire

regulations must be followed.


ALL SITE PERSONNEL MUST FOLLOW OCCUPATIONAL HEALTH AND SAFETY PROCEDURES.

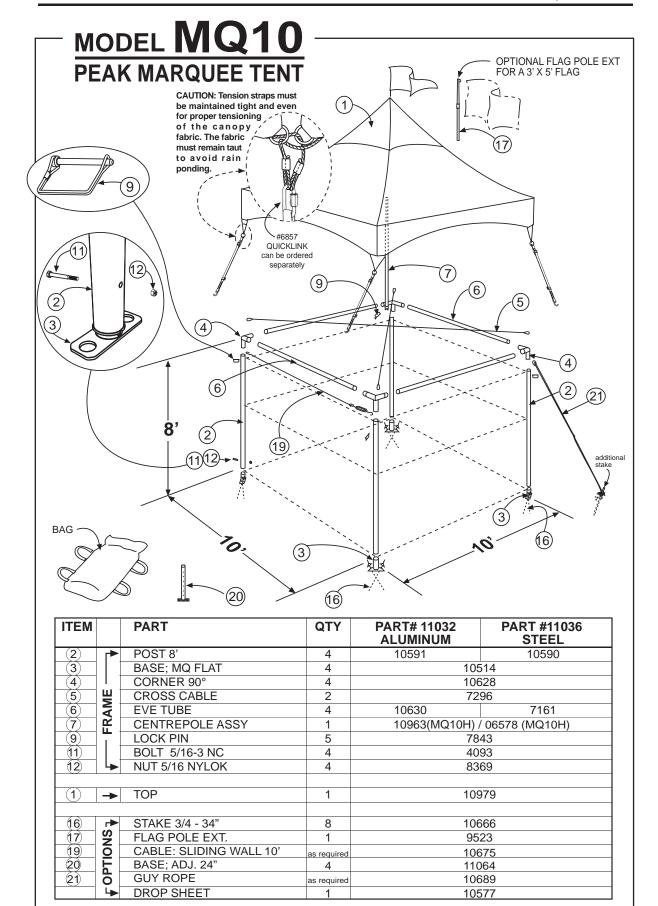

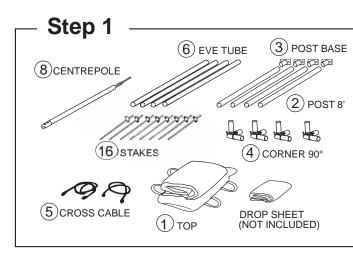


- Check all the parts before assembling the tent.
- Refer to assembly drawing on page 4 for part quantities and part numbers.

*Bolts, Nuts and Lock-pins not shown.

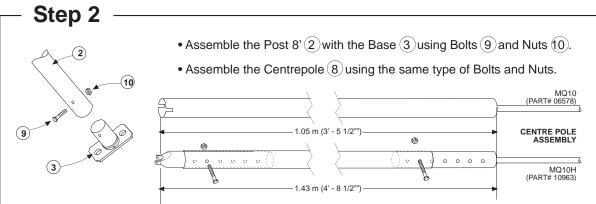


 
Step 3



 Assemble Corner 90° 4 and Eve Tubes 6 by slipping one tube to another to form upper frame.

  
Step 4






Install first (bottom) Cross Cable (5)
diagonally in square frame by
hooking the cable end loop to the
corner pin.

 Step 5




- Install second Cross Cable. Lift last corner to shorten the distance and hook the cable in place.
- Lowering the corner causes the corners to adjust their position and the cables to tighten.

 
Step 6



 • If Sliding Walls are to be installed, attach the Cable for Slide Wall 20 to the Corners and tighten with turnbuckle.



 
Step 7



PROTECTING CANOPY -

• Unfold Drop Sheet (not included) (18) over the Cross Cables to protect the Tent Top and to keep the Tent Top clean.

Step 8

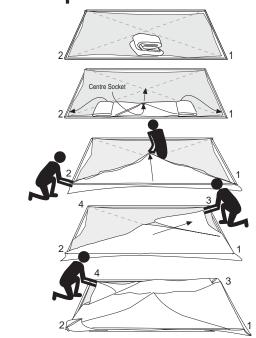


CANOPY INSTALLATION -

- * Corners are numbered for ease of explanation only.
- Place the Canopy beside the middle part of one frame section and unfold fabric along one end.
- Roll out the Canopy.
- * Ensure that centre socket would pull out towards the centre, otherwise rotate entire Canopy bundle 180°.
- Pull centre socket, unfolding towards the centre.
- Attach webbing 1 & 2 to corresponding corners as shown in **STEP 8A** below.
- Pull upper layer towards the 3rd corner. Use toggle rope and avoid stepping on Canopy.
- Repeat to 4th corner.
- Attach webbings 3 & 4 to corresponding corners.
 SEE STEP 8B below.

ATTACHING WEBBING TO CORNER HOOK

Step 8A

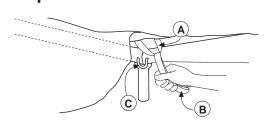

 Attach one segment of the Canopy to the upper frame by pulling handle

 B to place loop webbing

 around the corner loop

 C.


Step 8B

ATTACHING THE LAST


• To attach the last corner, insert a stake through webbing (A) and push down until the webbing slips underneath the corner loop.



ERECTING THE TENT

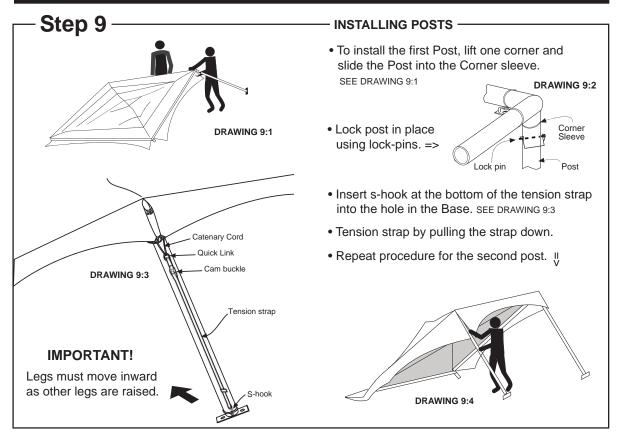




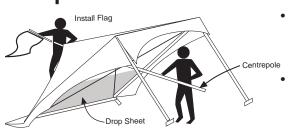


CENTREPOLE INSTALLATION

- After raising one side, push Drop Sheet towards the lower half of the frame to expose the Cable intersection.
- Insert the Centrepole through the socket at the centre of the Canopy and lean the Centrepole against the intersection of the Cross Cable.
- Install the Flag on the Centrepole from the outside.
- * Be careful when stepping on fabric. Removing shoes would be recommended to avoid soiling or damaging the Canopy.

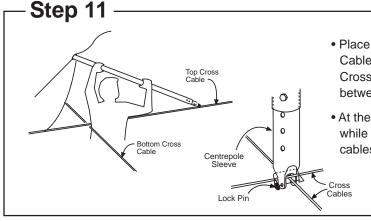

- Place the Centrepole sleeve on the top Cable and slide to the intersection of the Cross Cables, wedging the Centrepole between the cover and the cables.
- At the intersection, push down bottom cable while pulling up the top cable to set both cables directly below the Centrepole sleeve.
 - Secure the Centrepole to the cables using the Lock-Pin.


Step 12

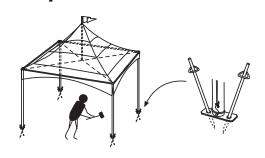

Catenary

Tension strap

 
- Proceed to install the rest of the Posts.
- Align and straighten Posts and drive two Stakes at each Post Base.
- Remove Drop Sheet and fold up keeping clean side in.




SECURING TENSION STRAPS

• Tension the Tent Top by tightening each tension strap. Tie off slack rope tails to main ropes.**

Catenary cord assembly detail:

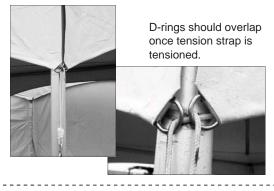

IMPORTANT: Each installation site must be evaluated by installer to determine proper securing method. Site conditions may require anchorage different from what was provided with the structure.

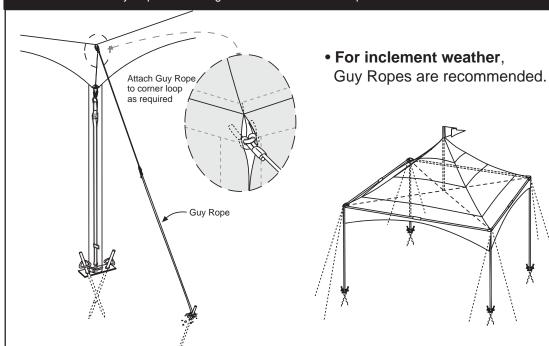


Wall Installation


* Before installing walls, make sure toggle ropes are evenly tensioned and the Canopy is evenly positioned on the frame.


Check if Cable: Slide Wall is properly tensioned. Tighten with turnbuckle if needed.

 1. Clip walls to Cable: Slide Wall as shown below.




  
- 2. Slide the wall towards the other end. =>
- 3. Secure top wall strap wall straps to Eve Tube.
- 4. Secure side wall straps to Posts. Evenly tension straps. =>
- * Walls are available with Delrin side release or steel buckles.
- * Walls with batons are equipped with side release buckles or velcro straps.

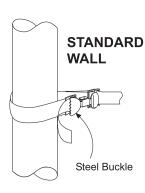









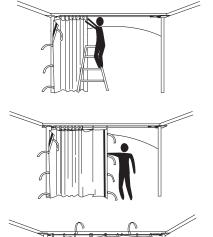

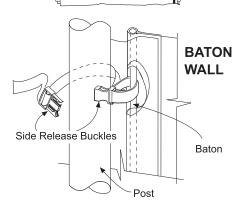

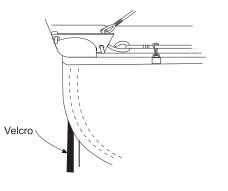

Joiner Installation

- 1. Unfold joiner
- 2. Attach velcro straps to Eve Tube while tensioning toward corners.







3. Attach clips to Cable: Slide Wall.




4. Repeat procedure on the opposite side.





5. Insert lapels between two posts

(* Loosen toggle ropes to slip lapels underneath it.)

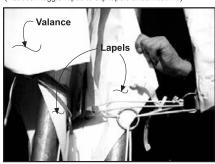

6. Spread lapels under valance.



7. Insert the strap on the lapel through the ring in the adjacent valance and secure buckles. Pull loose strap to tighten.







8. Fix downspout and tension toggle rope.



 


* Make sure downspout is free to pass water.



₹₹

 Fasten canopy velcros from top to bottom over the lapel. Flatten well for a neat seal. =>





<= Correctly installed joiner.

10. From inside, fasten joiner and wall velcro together to hide posts.





11. Joiner should smoothly follow the catenary curve.



Summary -

- 1. Check parts.
- 2. Assemble Corner 90° and Eve Tubes to form upper frame.
- 3. Install Cross Cables.
- 4. Spread Drop Sheet over Cross Cables for Canopy protection.
- 5. Unfold Canopy.
- 6. Attach Canopy webbings to corner loops.
- 7. Install first two Posts. Secure with Lock-Pin and insert the s-hook of the toggle rope into the hole at the Post Base.
- 8. Move Drop Sheet to clear the Cross Cable intersection area.
- 9. Insert Centrepole through the centre socket.

- 10. Install flag from outside.
- From inside, place Centrepole over the Cross Cable intersecting point. Secure with Lockpin
- 12. Remove and fold Drop Sheet.
- 13. Install remaining Posts.
- 14. Drive two Stakes through each Post Base.
- 15. Tension each toggle rope.
- 16. Install Walls, Joiners or Guy Ropes if needed.
- 17. Make final inspection to ensure everything is in operational condition.
- 18. Clean up site.

To take down the tent, reverse the preceding installation steps.

Care for your Vinyl Tops

Care for your vinyl tops as you would to any vinyl surface.

Use mild detergent industrial cleaner with no chlorox.

To clean, spread tent top on clean surface. Small sharp pebbles will create holes in fabric when stepped on. Try laying fabric on astro turf to wash. Dirt and tiny sharp particles tend to fall into the carpet pile, away from the fabric. Some renters set up the tents to wash and dry.

Mop detergent solution onto a section of fabric and let sit for awhile allowing the detergent to work on the soiled areas.

Rub, scrub or brush; elbow grease is an essential ingredient. Pressure washing may harm your tent fabric and is not recommended. If possible hang cover and allow to dry thoroughly.

DO NOT put your WSSL tent away damp. This will allow mold & mildew to grow and discolour the cover. Always dry the tent. To speed things up, try fans or carpet air blowers and hanging the canopy.

Trees can be a problem with sap, pollen, blossom, etc. Flowers & leaves, sometimes contain powerful natural organic chemicals capable of etching an artistic silhouette into your beautiful WSSL tent. Beware of tents under trees!

- Always use a drop sheet during setup and take down.
- Have some cleaning equipment with you for the on-the-spot clean ups.
- BBQ's add a lot of grease and grime to the underside of the tent and is not recommended even with the walls off.

STORAGE - store vinyl canopies and other parts clean and dry.

Maintaining Your Tent

Your **WSSL Peak Marquee Tent** will serve your needs now and for many years to come. Tighten the top and walls to avoid wind flap and consequent wear on the fabric. Periodically the fabric should be cleaned; in place or when dismantled. Using mild detergent, water and a deck mop, clean wipe the fabric roof or walls. Let dry. Repair any damage to the fabric using a WSSL Fabric Repair Kit. Repair or replace any possible damaged frame parts.

TENT FABRIC CHARACTERISTICS

MILDEW - If mildew is detected, remove it immediately. Regardless of treatment, there is no way to absolutely stop fungus growth if it is prevalent in your area. No tent can be guaranteed not to mildew. Vinyl fabrics may mildew in storage if not properly stored. BE SURE TENT IS CLEAN AND DRY BEFORE STORING IN A COOL, DRY PLACE.

WATER RESISTANCE - WSSL tents are made of waterproof vinyl/polyester fabrics using waterproof welded seams. Because these fabrics are impervious to moisture, condensation may occur with some heaters and if the tent is poorly vented. Do not confuse water condensation with leakage especially on vinyl tents.

FLAME RESISTANT - All WSSL tent tops and walls are fire retardant. All WSSL tent fabrics satisfy ULC-S109, NFPA 701, and California fire marshal tests for fire resistance.

FADING-OPACITY - Variable sun conditions, exposures, types of materials and fabric finishes all influence the weathering of fabrics. WSSL fabrics have been chosen for their colour and opacity consistency and stability.

COLD CRACK - Chosen for their tolerance to cold cracking, our translucent fabrics remain flexible at temperatures below 0°F. The opaque fabrics are laminated and therefore become stiffer as the temperature drops. When the temperature is near 32°F, care should be taken in folding and moving the fabric to prevent cracking of the vinyl, especially the walls with windows.

WSSL TENTS

Warner Shelter Systems Limited creates fabric-clad structures to suit virtually every purpose, from special events, trade shows, catering and outdoor concerts to warehousing and industrial use. Our award-winning tents are user-friendly, durable and set-up quickly.

We have earned a reputation for providing a high level of service to customers since 1970. It is a pleasure to serve you. Please contact us for further information.



PEAK MARQUEE TENT

A favorite for special events, fairs, trade shows, and food service use. With its ease of setup and lightweight frame, the Marquee is user-friendly as well as attractive.



ARABESQUE THEATRE TENT

The Arabesque Theatre with Its high arched ends allows generous height over a stage at one end and bleacher seating at the other. These tents singularly or joined together, create a large attractive, clearspan interior.



MODULAR CLEARSPAN BUILDING

Modular building Often used for large special events, but are equally suitable for warehousing, retail and industrial use and environmental projects."MODS" are spacious and strongly built.



ARABESQUE STAGECOVER

The Arabesque Stagecover creates a striking backdrop for any outdoor concert with its dramatic curves and bold stripes. It is renowned for its superb acoustic projection and excellent sight lines.



PEAK POLE TENT

Great Solution for large functions of all types, combining the nostalgic appeal of old fashioned circus "big tops" with the advantages of modern technology. Available in 40', 60', 80', and 90' widths.



DOME STAGECOVER

With great acoustics and excellent sight lines, our attractive SC series is available in four sizes, with the SC-70A large enough to accommodate a full orchestra.



WSSL GIGA-SPAN

The WSSL Clearspan Series structures are designed, engineered, and manufactured in our CWB certified plant. The open web truss galvanized steel frames are assembled to satisfy the applicable building code.



TENT -C- CAN

The WSSL Tent -C- Can: For its 40 years anniversary Warner Shelter Systems Limited WSSL offers to the world with a NEW Warner Innovation.



WSSL GARAGE

WSSL Garage come complete with galvanized steel frame and fire retardant cover, easy to relocate structure featuring clear span truss framing, and 12' x 12' sliding door for easy access



TENT-X-SPAN

Sturdy, versatile and portable, the Tent-X-Span fabric structures are light weight, easy to transport, store, and erect. Box beam aluminum frame, interchangeable parts, and easily joins to peak marquee tents.

Copyright © 2010 by Warner Shelter Systems Limited
All rights reserved.

This manual or any part thereof must not be reproduced in any form without the written permission of Warner Shelter Systems Limited.

The information contained in this manual is intended for the exclusive use of the customer and/or Building Authority.

Warner Shelter Systems Limited is not responsible for personal injury and damage to property caused by the application of the procedures documented in this manual to any situation not explicitly contemplated here.



Warner Shelter Systems Limited Tents and Fabric-Clad Structures

9811 - 44th Street, SE, Calgary, Alberta, Canada T2C 2P7
Phone: (403) 279-7662 or (800) 661-6155; Fax: (403) 236-2633
Website: www.wssl.com • E-mail: warner@wssl.com

