

## PEAK MARQUEE TENT MQ10H

#11032: Frame Assembly with Aluminum Tubes

#11036: Frame Assembly with Steel Tubes


ANCHOR LOAD GUIDE

No Walls

\*WIND SPEED - is the wind directly on the tent. The wind speed reported through the media is usually measured 33' above ground at a local airport weather station. Wind load on your tent may be effected considerably by topography, trees, buildings, fences and other adjacent roughness.


To increase anchorage and stability, guy ropes are recommended. Much of the anchor loading may be transferred from the post base to the guy anchors.

Guy ropes should be used in high wind areas.

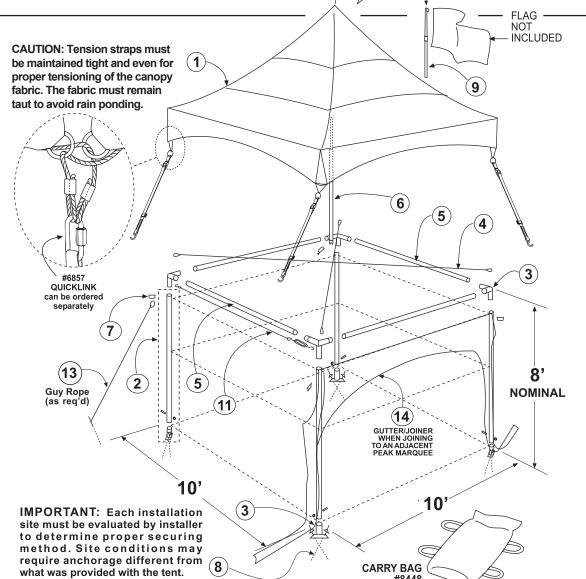



WIND SPEED (mph)











OPTIONAL FLAG POLE FOR 3' X 5' FLAG

CANOPY						
		PART	PART NO.	QTY		
<b>1</b>		Тор	#10979	1		
TOP		Quicklink	#6857	4		
		Tension Strap	#15050	4		
FRAME						
	₽ <b>₽</b> ₽	Base	#10514	4		
(2)		Post alum	#10591	4		
POST ASSEMBLY	8, NOWIINAT	steel	#10590	4		
		Bolts	#4093	4		
		Nuts	#8369	4		
3 CORNER 90°		Corner 90°	#10628	4		
4 CABLE		Cross Cable	#7296	2		
(5)	<i>M</i>	Eve Tube				
EVE TUBES	9' 3"	alum	#10630	4		
EVE TUBES		steel	#7161	4		
6 CENTREPOLE ASSEMBLY	tube  4' 9" : for proper tensioning of top fabric	Centrepole	#10963	1		
7 LOCKPIN		Lock Pin	#7843	5		

OPTIONS BART NO OTY				
OF HONS	PART NO.	QTY		
8 STAKE 3/4" x 34"		#10666	8	
9 FLAG POLE EXT.	•	#9523	1	
10 DROP SHEET	10' x 10'	#10577	1	
11 CABLE: 10' SLIDE WALL		#10675	AS REQ'D	
12 BASE: ADJ. 24"		#11064	4	
(13) GUY ROPE	15' (5m)	#10689	AS REQ'D	
14 GUTTER/JOINER	10' NOMINAL	#10960	AS REQ'D	
REPAIR KIT for Vinyl Tops	GLUE FABRIC	#6844	-	

Please call on our 800 line with any questions or concerns:



Toll-free: 1-800-661-6155
Phone: (403) 279-7662
Fax: (403) 236-2633
Web: www.wssl.com
Email: warner@wssl.com

9811 - 44th St, SE, Calgary, Alberta, Canada T2C 2P7